


AUTOSLIDE

Using your AutoSlide 4-Button Remote

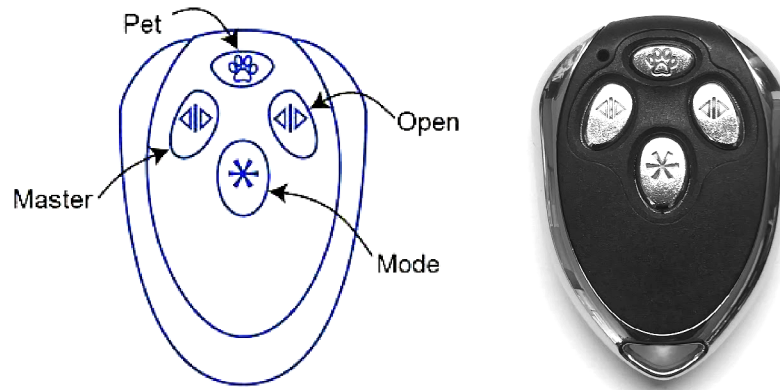

The AutoSlide 4-Button Remote offers you full wireless control over an AutoSlide unit:

- **Pet [top button]:** Triggers the Pet Sensor of the unit. Note that this button will only work if the unit is in Pet Mode, and will open the door to the programmed pet width.
- **Master [left button]:** Triggers the Inside Sensor of the unit. This will trigger the unit to open in almost all modes.
- **Open [right button]:** Triggers the Outside Sensor of the unit. This will trigger the unit to open in some modes, but is disabled in Red or Blue mode.
- **Mode [bottom button]:** Changes the mode (Green Mode, Blue Mode, Red Mode, Pet Mode) of the unit.

AutoSlide Unit Pairing Instructions:

1. Remove the unit's cover to access the control panel. Press the Sensor Learn button on the control panel; the light next to it should turn red. Now press any button on the 4-Button Remote.
2. Press the Sensor Learn button again - the Sensor Learn light should flash three times. Press any button on the 4-Button Remote again. The Sensor Learn light should now turn off.
3. Confirm it's paired by pressing either the Mode button or Master button on the 4-Button Remote.

A video of this process can be found at: youtu.be/y4WovHxJUAQ

Note: if the remote ever fails to pair and/or has stopped functioning (no blue light), it may need a battery change. Each 4-Button Remote takes 1x Alkaline 27A 12V Battery.



(Actual Size)